

## **RESETTING REMOTE CONTROLS**

**If a remote does not function, first check to see if the red light on the remote comes on when a button is pressed. If it does not then the battery will need replacement. It is recommended that you purchase a new battery from a Radio Shack store. If the red light does come on and the remote does not activate the awning then make sure that the buttons on the Control Panel activate the awning. If they DO NOT then check that the wires have not accidentally been disconnected.**

**If the red light on the REMOTE comes on and the Control Panel is operational then proceed to the following steps to reset the Remote Control.**

- 1) Open the bottom cover of the CONTROL PANEL.
- 2) Press and hold the **black** button on the left until it beeps once and then release.
- 3) Take your REMOTE CONTROL, press and release the **top** button and you will hear 3 beeps
- 4) Press and release the **center** button and you will hear 3 beeps.
- 5) Finally press and release the **bottom** button and you will hear 3 beeps.

Your REMOTE has now been reset and it will activate the awning. Repeat Steps 2-5 for the 2<sup>nd</sup> REMOTE CONTROL if necessary.

When done replace the bottom cover of the CONTROL PANEL and secure it.