


ROOF MOUNT INSTALLATION INSTRUCTIONS

All Roof Mount parts, including the hardware, are zinc plated to resist corrosion

- The mounts must be installed to the center of roof joist with **3/8"** zinc plated lag bolts (not included) and must penetrate at least **2 inches**. See the **Awning Installation Instructions** included with your awning for the correct placement of the mounts.
- Mount the awning brackets to the Roof Mounts as illustrated below using the zinc plated screws, washers and nuts included.

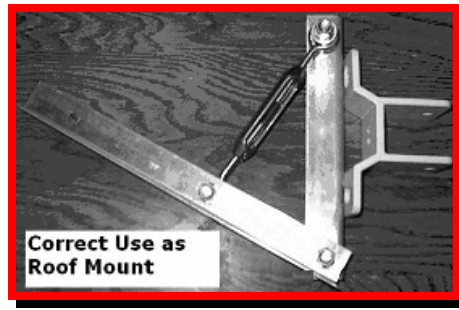

Roof Mounting

- Adjust the pitch of the mounts so that they are as close to vertical as possible by turning the included adjustment turnbuckle.
- Once the mounts have been installed and the pitch adjusted **ALL THE BOLTS AND NUTS MUST BE TIGHTENED.**
- The awning can now be mounted to the secured awning brackets. See the **Awning Installation Instructions** included with your awning for the remainder of the awning installation procedure.
- After the awning is mounted you may have to readjust the pitch of the mounts by use of the turnbuckles.

NOTE:

Every effort has been made to manufacture the mounts for normal use. In some unusual instances you may have to drill a mounting hole in another location. In these cases care should be taken to not drill too close to the edge of the angle iron since this will reduce the integrity of the mount.

SOFFIT (OVERHEAD) BRACKETS INSTALLATION INSTRUCTIONS

- The brackets must be installed to the center of soffit (overhead) rafters with **3/8"** zinc plated lag bolts (not included) and must penetrate at least **2 inches**. See the **Awning Installation Instructions** included with your awning for the correct placement of the mounts.

NEVER INSTALL THE MOUNTS TO FACIA BOARDS OR MOLDINGS



Soffit (Overhang) Bracket

- The awning can now be mounted to the secured Soffit brackets. See the **Awning Installation Instructions** included with your awning for the remainder of the awning installation procedure.